#### **INSTRUCTION MANUAL**

## SUPER 30 AUTO EJECT

#### **AUTOMATIC SHORE LINE DISCONNECT**



# **30 AMP**

MODEL # 091-159-430-250 Note: 3-Phase ONLY

2 YEAR WARRANTY



#### INTRODUCTION

The Super 30 4 Pin Auto Eject is a completely sealed automatic power line disconnect. This prevents contamination of the mechanism by road dirt and ensures long reliable life even when mounted in the most severe environment. A novel plug detector closes and opens a 40 amp contactor in a seperate weatherproof box after the mating connector is inserted and before the connector is ejected. This eliminates arcing at the connector contacts and assures long contact life. As with all Auto Ejects, the Super 30 4 Pin Auto Eject is connected to the starter circuit so that ejection occurs when the engine is cranked.

#### INSTALLATION INSTRUCTIONS

#### Step #1 Mounting of unit

- 1. Locate a convenient place on the vehicle to mount the Super 30 4 Pin Auto Eject. A minimum clearance of 5 inches behind the mounting panel is required.
- Place the hole template (figure 4) in position and center punch in 6 places. \*Note: it is
  recommended to mount the unit vertically with the weatherproof cover closest to the top of the
  mounting plate (see Figure 1).
- 3. Drill 6 mounting holes, #29 drill (0.136" diameter). Be certain that all the holes are precisely located.
- 4. Cut-out rectangular hole.
- 5. See figure 1mounting. Install weatherproof cover, weatherproof cover gasket, mounting plate, and mounting plate gasket to super 30 using (2)#8-32 x 3/4" and (2)#8-32 x 1 5/8" screws provided.
- 6. Install that assembly into cut-out in truck wall using (6)#8-32 x ½" self tapping screws provided.

#### **Step #2 Mounting of Contactor Box**

1. Locate a convenient place on the vehicle close to the Super 30 4 Pin Auto Eject so the wires will reach the box. Use screws supplied.

#### Step #3 Wiring Unit

- 1. See figure 3 Wiring. Insert AC wires through the Contactor Box strain relief and install wires as shown.
- 2. See figure 3 Wiring. Install DC wires as shown, use 18 AWG wire minimum.
- 3. Test the unit to verify that it is operational.

#### TEST AND OPERATION

To test the unit make sure all wiring is complete. Plug in connector to the Super 30 4 Pin Auto Eject and start the vehicle. The connector should eject at this time.

The Super 30 4 Pin Auto Eject disconnects the shoreline by extending a shaft to push the plug out of the unit.

A novel plug detector closes and opens a 40 amp contactor in a seperate weatherproof enclosure after the mating connector is inserted and before the connector is ejected. This eliminates arcing at the connector contacts and assures long contact. Because of this, the connector can be operated manually or automatically with no damage to the unit.

Measure the voltage from TP1 & TP2 (see figure 3). This must be 120 volts AC to operate the contactor.


#### **NOTES AND CAUTIONS**


#### NOTE


Do not permit the shore line to drop to the floor when it is ejected. Keep from falling by utilizing a bungee cord restraint, cord reel or some other device. Dropping the connector may result in damage or breakage. Kussmaul Electronics does not warrant the connector.


#### **ABOUT CONNECTORS**

The Super 30 4 Pin Auto Eject is supplied with mating connector. We suggest that you utilize the connector supplied. When replacing with another connector, test carefully that the new connector will eject properly.

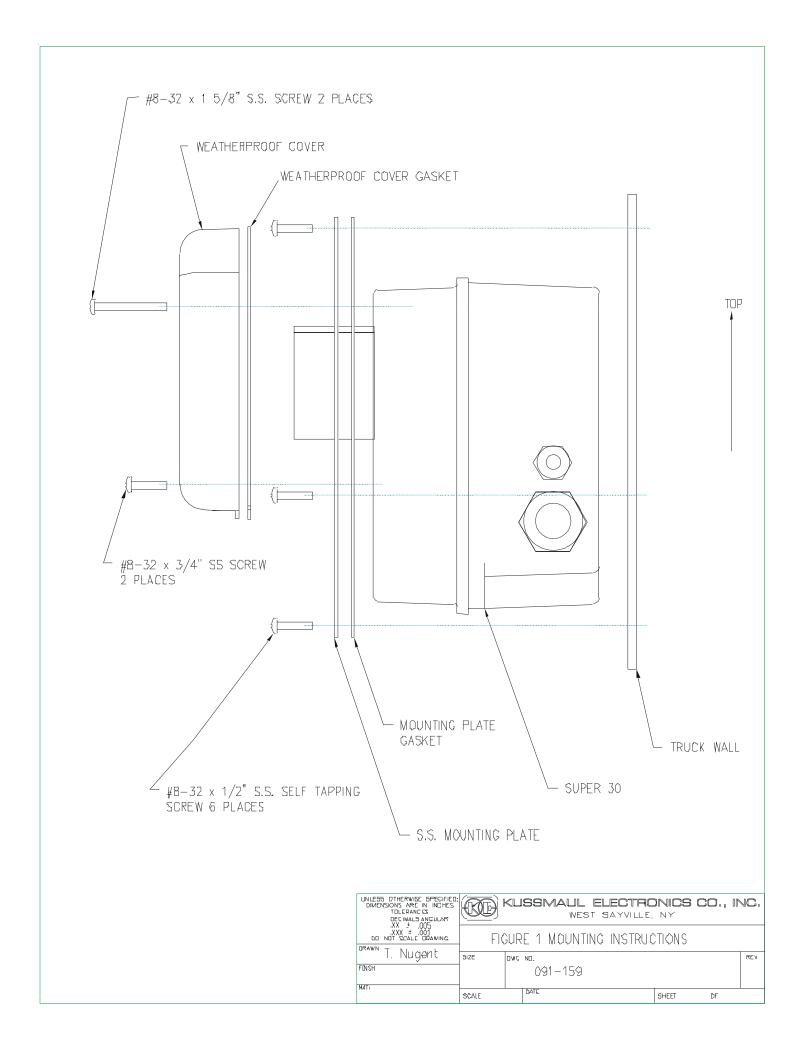

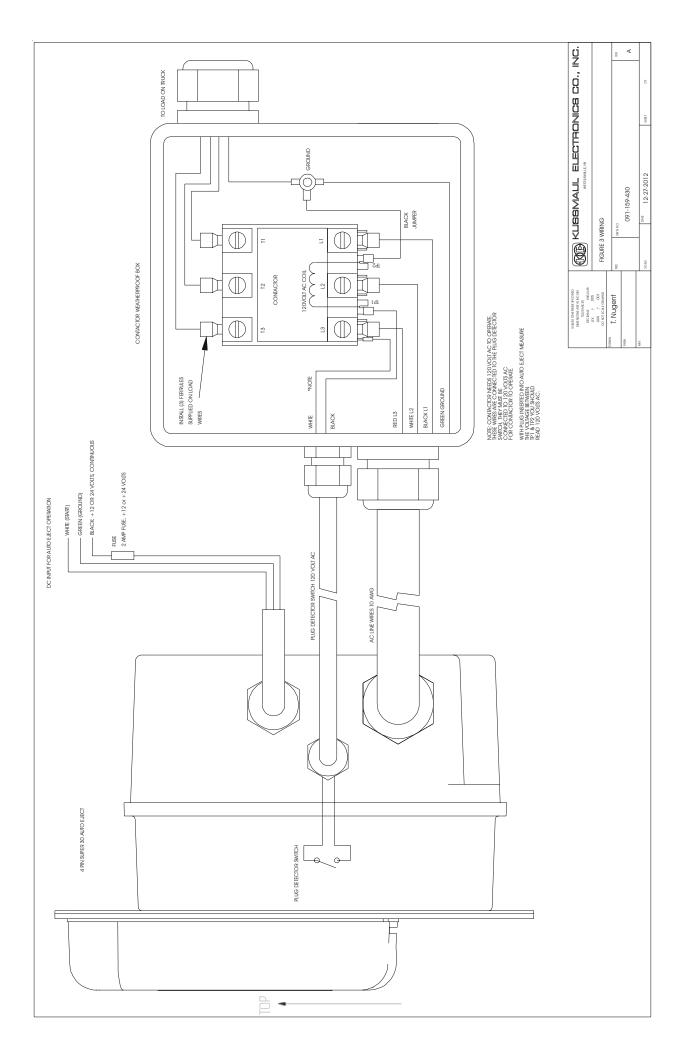

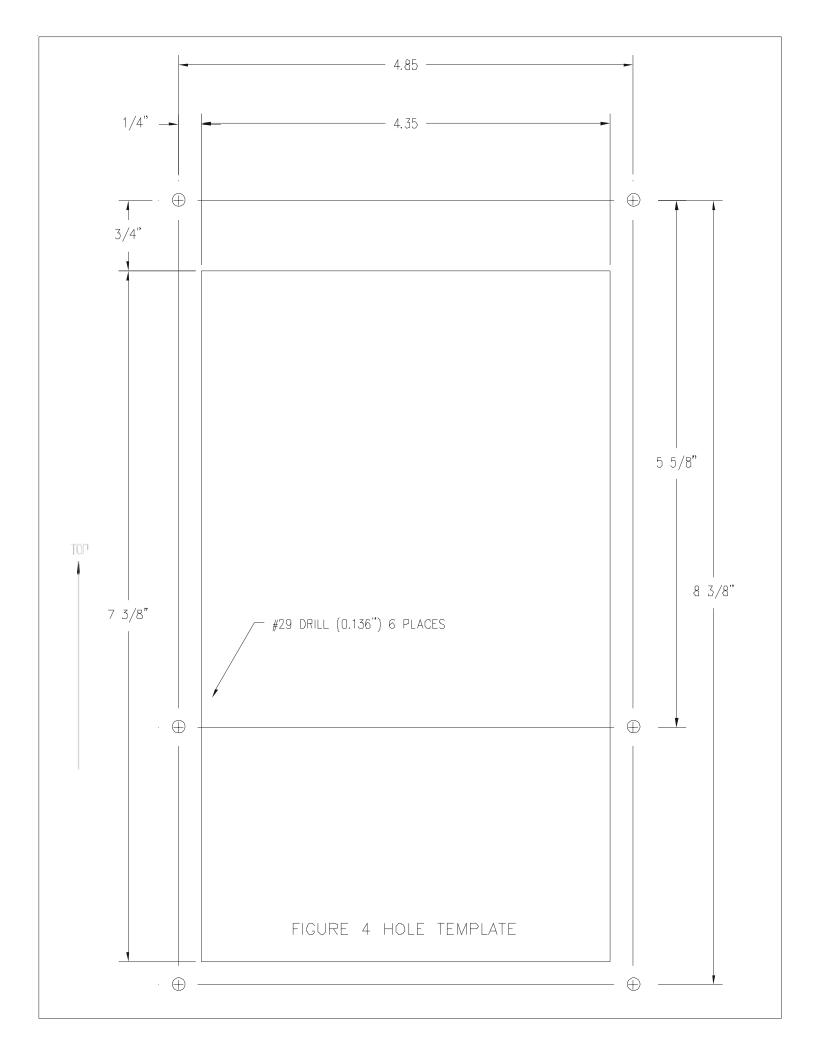

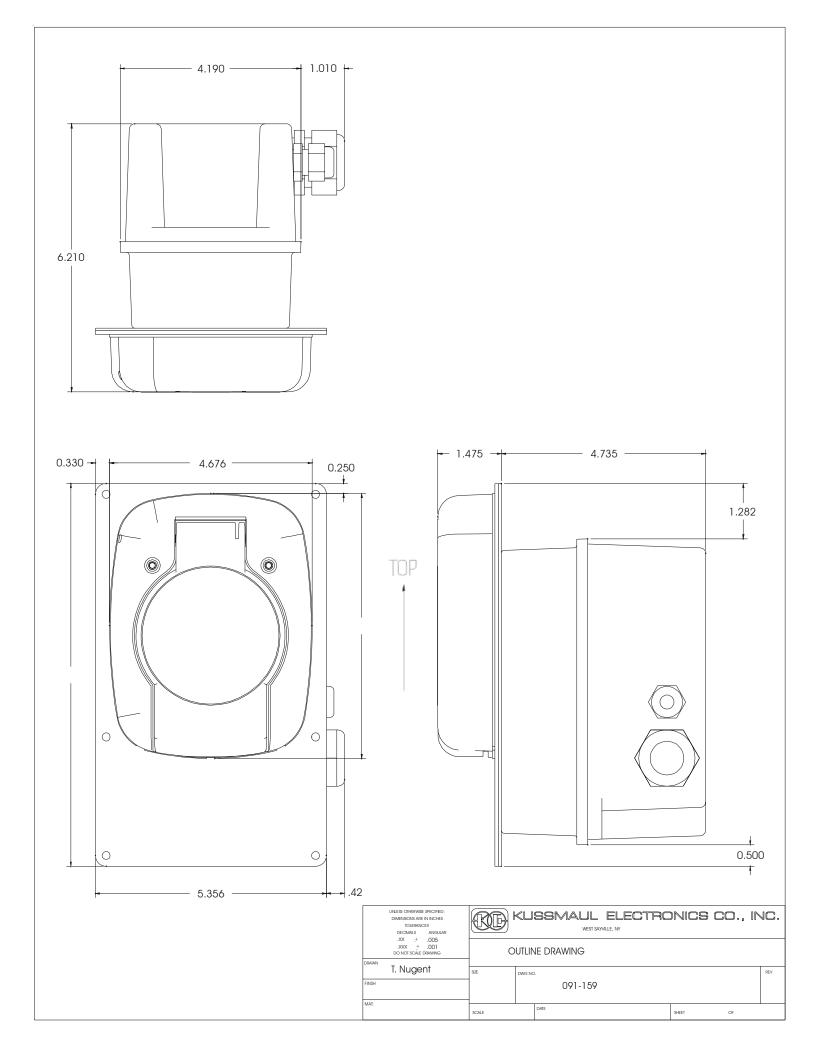

## **SPECIFICATIONS**

Input Voltage: +10 to +28 VDC Input Current: 1.6 Amps Max

**External Fuse:** 2 Amp

Rating: 3-Phase, 250 Volts AC, 30 Amps

Hardware Pack: Inline fuse holder with fuse; mounting plate with gasket;

cover with gasket; 720239FX: 4-pin mating plug;

mounting screws

### **INSTALLATION RECORD & WARRANTY**

Date Installed	
Installed By	
-	
Vehicle Identification	
Vehicle Owner	

#### **2 YEAR WARRANTY**

All Super 30 Auto Ejects manufactured by Kussmaul Electronics Company Inc. are warranted to be free of defects of material or workmanship. Liability is limited to repairing or replacing at our factory, without charge, any material or defects which become apparent in normal use within 2 years from the date the equipment was shipped. Equipment is to be returned, shipping charges prepaid and will be returned, after repair, shipping charges paid.

This warranty does not include normal wear and tear, pitting of the electrical contacts, malfunction due to contamination of the mechanism, or any cracking, breakage or damage to the connector.

Kussmaul Electronics Company, Inc. shall have no liability for damages of any kind to associated equipment arising from the installation and /or use of the Kussmaul Electronics Company, Inc. products. The purchaser, by the acceptance of the equipment, assumes all liability for any damages which may result from its installation, use or misuse, by the purchaser, his or its employees or others.