
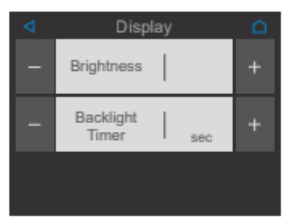
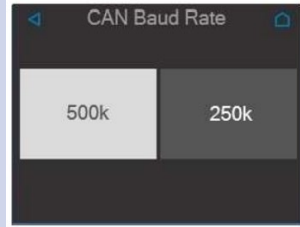


New Features	
Passcode Protection	
Display Timer	
CAN Baud Rate Selection	

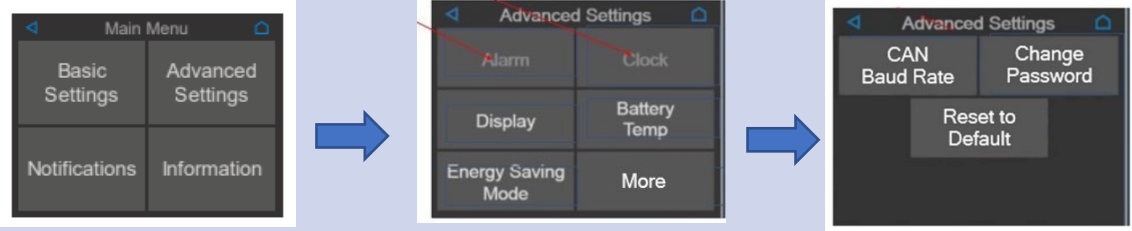
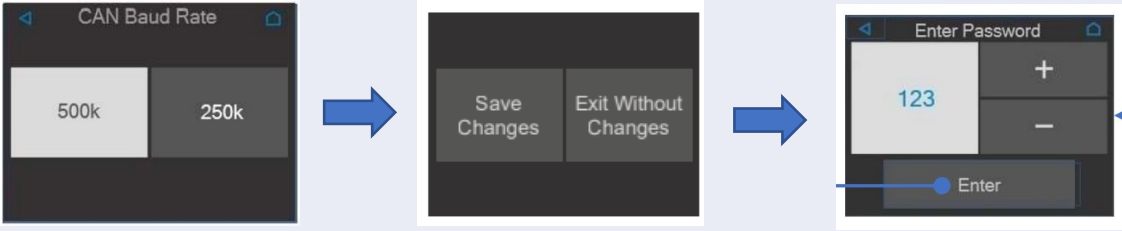
New Password Protection

Steps		
1	<p>From home screen select menu icon or menu button. From the Main Menu select Advanced Settings, tap More then select Change Password.</p>	 <p>The diagram illustrates the navigation sequence: starting with a menu icon (three horizontal lines), an arrow points to the Main Menu screen with options: Basic Settings, Advanced Settings, Notifications, and Information. A second arrow points to the Advanced Settings screen with options: Alarm, Clock, Display, Battery Temp, Energy Saving Mode, and More. A final arrow points to the Change Password option within the More menu.</p>
2	<p>Using the + and – icon, change the password to new desired new code.</p>	 <p>The diagram shows the password change process: 1. Change Password screen with '123' and '000 = Password Protection Off'. 2. An 'Enter' button. 3. A screen with 'Save Changes' and 'Exit Without Changes' options. 4. An 'Enter Password' screen with '123' and an 'Enter' button. 5. An 'Incorrect Password' error screen. A note below the error screen states: 'This screen will appear if incorrect passcode is entered'. A blue arrow points to the 'Enter' button in the 'Enter Password' screen with the text 'Enter previous or factory set passcode'.</p>
	<p>Note 1: factory default password = 123</p>	
	<p>Note 2: to disable password set password = 0</p>	

Display Timer

Steps		
1	<p>From home screen select menu icon or menu button. From the Main Menu select Advanced Settings, then select Display.</p>	
2	<p>Using the + and – icon, change the Backlight Timer from 1 to 120 min. If enabled, save changes using password protection.</p>	<p>Select back arrow or home icon to proceed with changes</p>
3	<p>To keep the display always on, select infinity symbol and save changes.</p>	
	<p>Note 1: factory default set to 5 min</p>	

CAN Baud Rate Selection

Steps		
1	From the Advanced Settings screen, tap More then select CAN Baud Rate .	
2	Using the 500k or 250k icon, select the appropriate Baud Rate. If enabled, save changes using password protection.	 <p data-bbox="988 868 1370 932">Select back arrow or home icon to proceed with changes</p>
	Note 1: baud rate factory default set to 500k.	