

INSTRUCTION MANUAL

E-Z Mounting Plate

For WP Auto Ejects



MODEL #091-185-010



KUSSMAUL ELECTRONICS CO., INC.
170 CHERRY AVE., WEST SAYVILLE, N.Y. 11796

Phone: 631-567-0314

Toll Free: 800-346-0857


Fax: 631-567-5826

Web: www.kussmaul.com

E-Mail: sales@kussmaul.com

E-Z MOUNTING PLATE INSTRUCTIONS

1. Locate a convenient place on the vehicle to mount the WP AUTO EJECT. A minimum clearance of 3 inches behind the mounting panel is required.
2. Place the Hole Template (Figure 2) in position and center punch in 4 places.
3. Drill 4 mounting holes, #29 drill (0.136" diameter). Be certain that all the holes are precisely located.
4. Cutout rectangular hole.
5. See Figure 1, Mounting. Install Weatherproof Cover, Weatherproof Cover Gasket, Indicator light to E-Z Mounting Plate, and install to WP Auto Eject using (4)#8-32 x 1" screws provided.
6. Install that assembly and E-Z mount gasket into cutout in truck wall using (4)#8-32 x 1½" self tapping screws provided.
7. Use the Auto Eject instruction manual for wiring information. Wire the indicator to any 120 VAC circuit on the vehicle so when the WP Auto Eject is plugged in the indicator will illuminate.

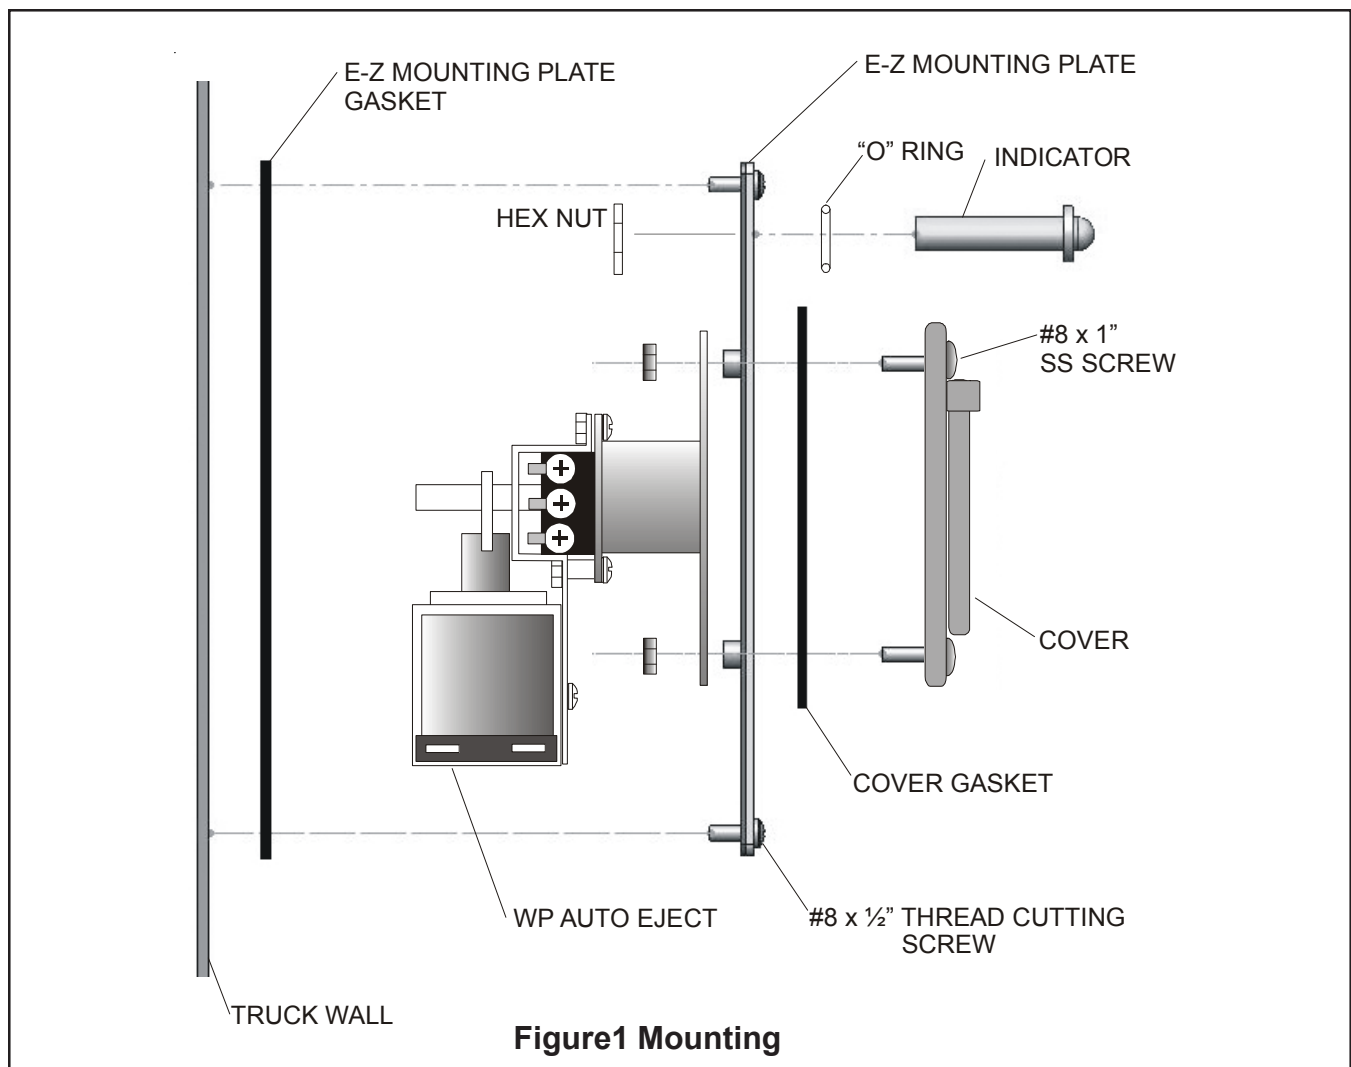

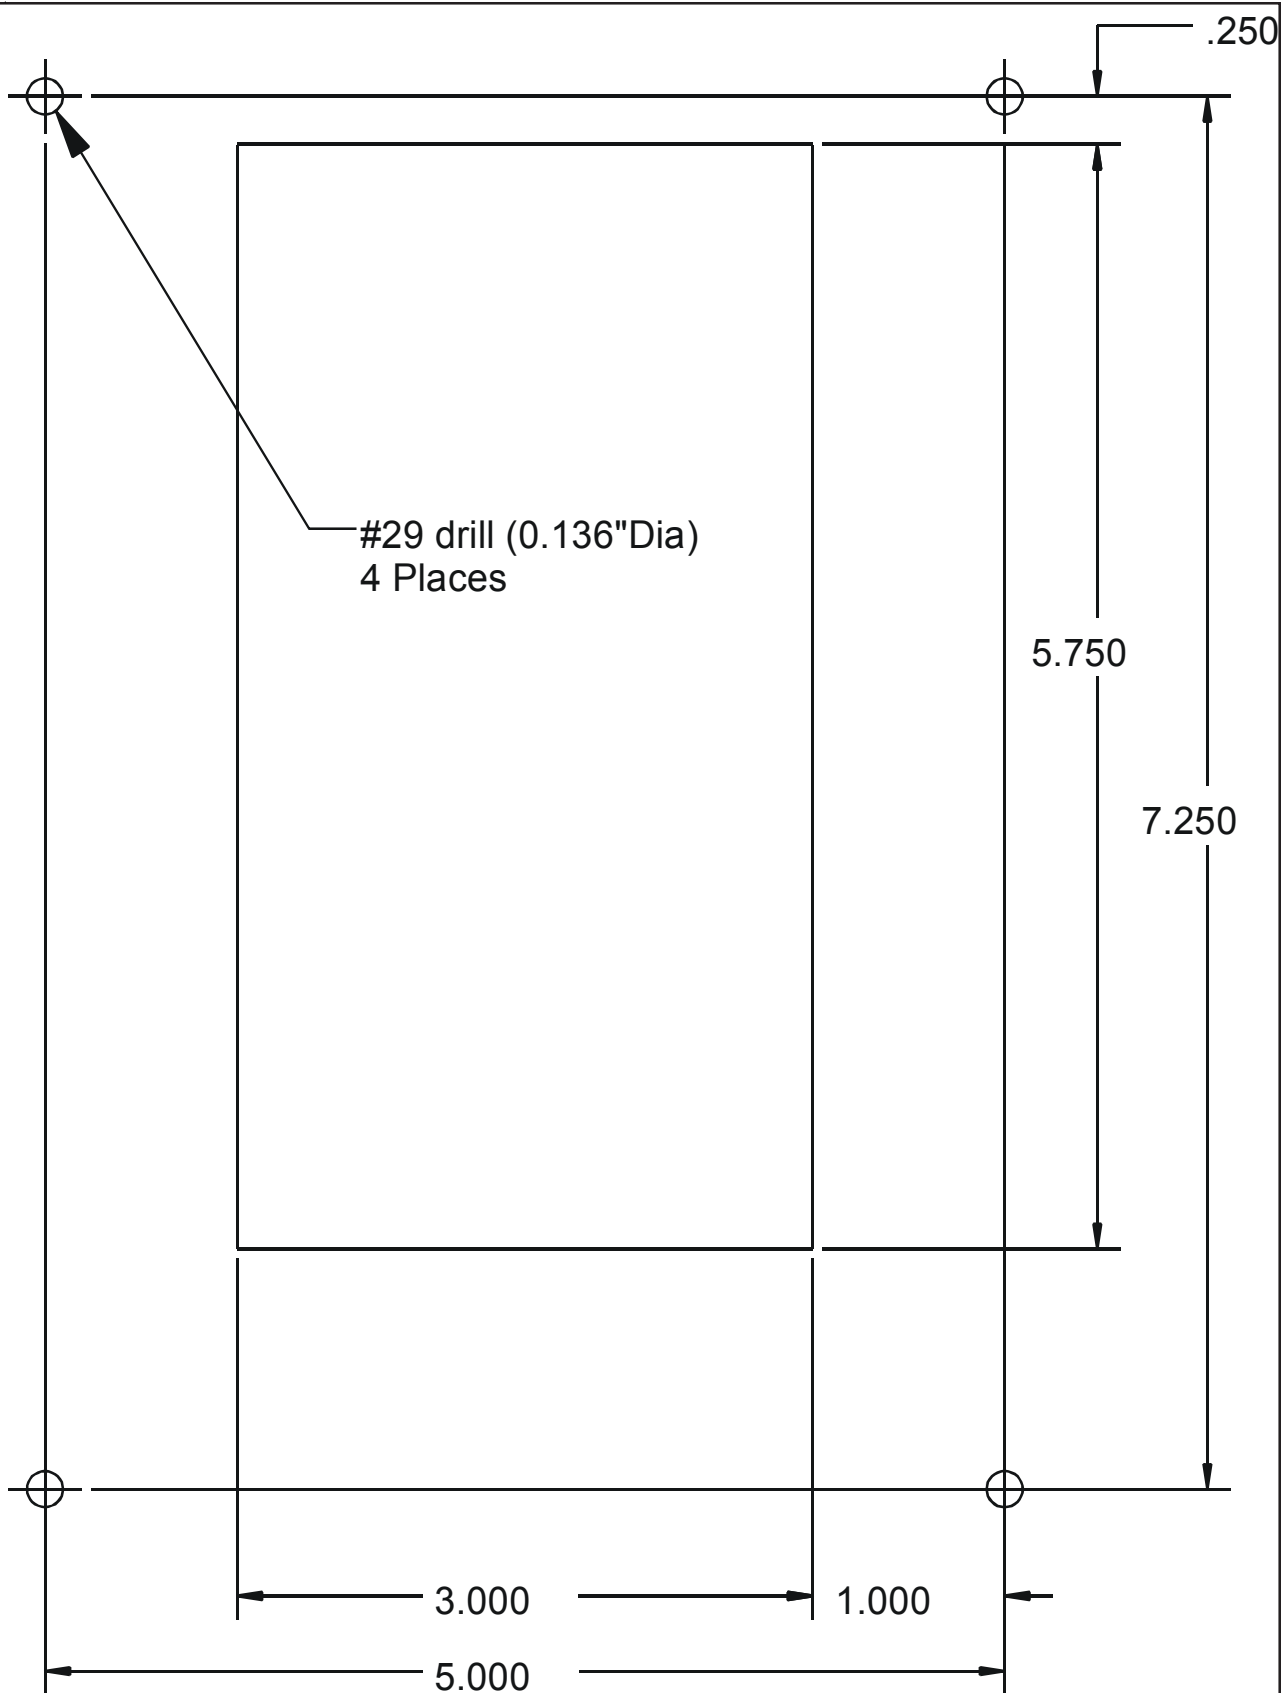


Figure 2 Hole Template