


# AUTO PUMP STATUS CENTER

## VOLTAGE & PRESSURE

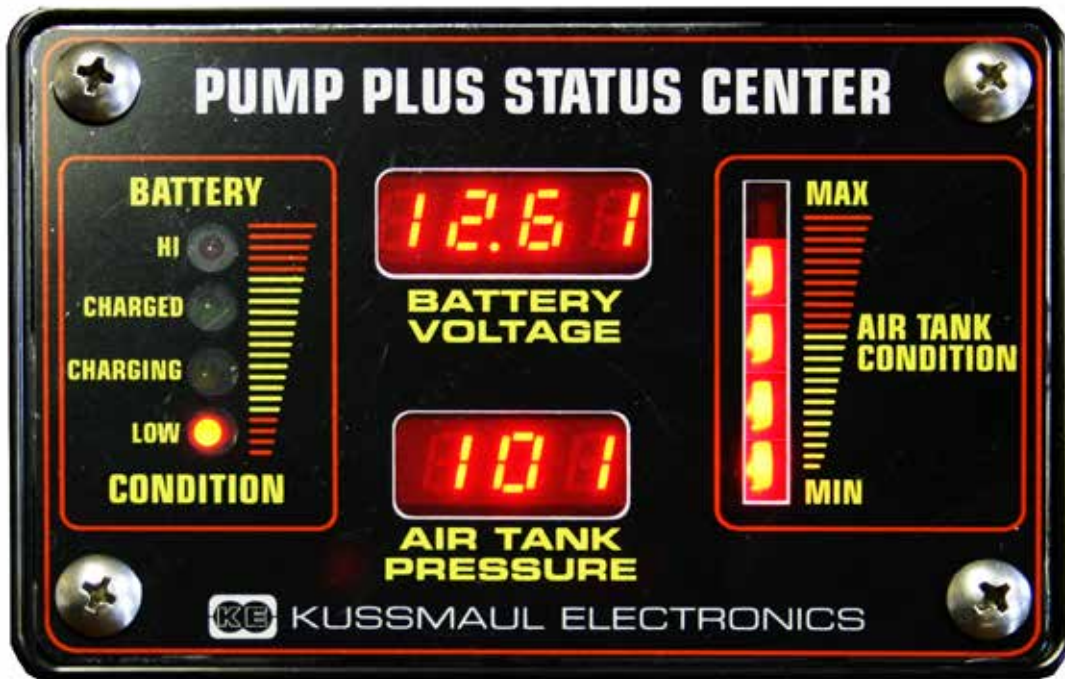

**MODEL #: 091-198-12-PP**

File: IM\_091-198-12-PP\_revD.indd  
Rev: D  
Revised By: MFG/PSS  
Date: 1-30-2015

3 YEAR WARRANTY



scan using your mobile  
device for more information

170 Cherry Avenue  
West Sayville, NY 11796  
www.kussmaul.com

**KE KUSSMAUL™  
ELECTRONICS**  
ENERGIZED AND READY, WHEN SECONDS COUNT

Ph: 800-346-0857  
Fax: 631-567-5826  
sales@kussmaul.com

# INTRODUCTION

---

The Auto Pump Status Center is an air pressure sensor with indicator that displays air pressure in pounds per square inch (PSI). The indicator contains a 2.5-digit numerical display and bar graph. The PSI indicator works in conjunction with an air pressure sensor. The air pressure sensor port can be connected to an air supply to measure and display PSI. Additionally, a 3.5-digit display measures and displays battery voltage.

The indicator is designed to be mounted on the exterior of a vehicle so that the battery voltage and PSI condition may be easily viewed. The indicator fits the Kussmaul standard indicator panel cut out.

---

## FEATURES

### I. PUMP PLUS STATUS CENTER

- Pressure sensor interface with 5/32 air supply input port
- 2.5-digit PSI display
- 3.5 digit VOLTAGE display
- Battery status LEDs
- 4-segment bar graph

### II. AIR SUPPLY

A 5/32 air supply input port is used to connect air supply to the pressure sensor interface and a 1/8 NPT is provided for connecting to the air tank.

### III. NUMERICAL DISPLAYS

A 2.5-digit display provides a PSI reading of the supplied air pressure; additionally a 3.5-digit display provides a voltage reading of the systems battery voltage.

### IV. BATTERY STATUS LEDs

4 LED's provide battery condition status: Hi Voltage, Charged, Charging, and Low Voltage.

### V. BAR GRAPH

The 4-segment bar graph is a graphical representation of the air supply condition. The bottom bar will flash if the supply pressure is below 50 PSI. All bars are illuminated when the pressure reaches 150 PSI.

---

## OPERATION

The 091-198-12-PP consists of a pressure sensor interface and indicator to measure and display PSI and battery voltage. A bar graph on the indicator provides a graphical representation of the air supply condition, while LEDs provide information on the condition of the battery.

During operation, the pressure sensor continuously monitors the air supply present at the air input port. The pressure sensor then generates an analog signal, which is then sent to the indicator. The indicator then converts the analog signal to the digital display. A 2-pin terminal connector is used to supply power to the pressure sensor interface. Additionally, a 4-pin terminal connector is used to interface the indicator with the pressure sensor. The 4-pin terminal provides power and pressure sensor signal to the indicator. Whenever the monitored air supply drops below 50 PSI the bottom bar graph LED will flash indicating low pressure. The 4-segment bar graph is fully illuminated when the air supply reaches 150 PSI.

---

# **INSTALLATION INSTRUCTIONS**

---


## **I. MOUNTING THE AUTO PUMP STATUS CENTER**

1. Mount the pressure sensor interface in a suitable location protected from moisture and excessive heat.
2. The indicator is designed to be mounted on the exterior of a vehicle so that the PSI condition may be easily viewed.

## **II. WIRING THE AUTO PUMP STATUS CENTER**

1. See figure 1, Wiring the Auto Pump Status Center.
2. Connect the air supply to the air pressure sensor input port using 5/32 tubing. A straight fitting, 1/8 NPT, is supplied for connecting to the air tank.
3. Connect DC input power to the 2-pin terminal. For continuous operation, supply continuous power to the pressure sensor interface.
4. Connect the indicator to the 4-pin terminal located on the pressure sensor interface.

### III. FIGURE 1: AUTO PUMP STATUS CENTER

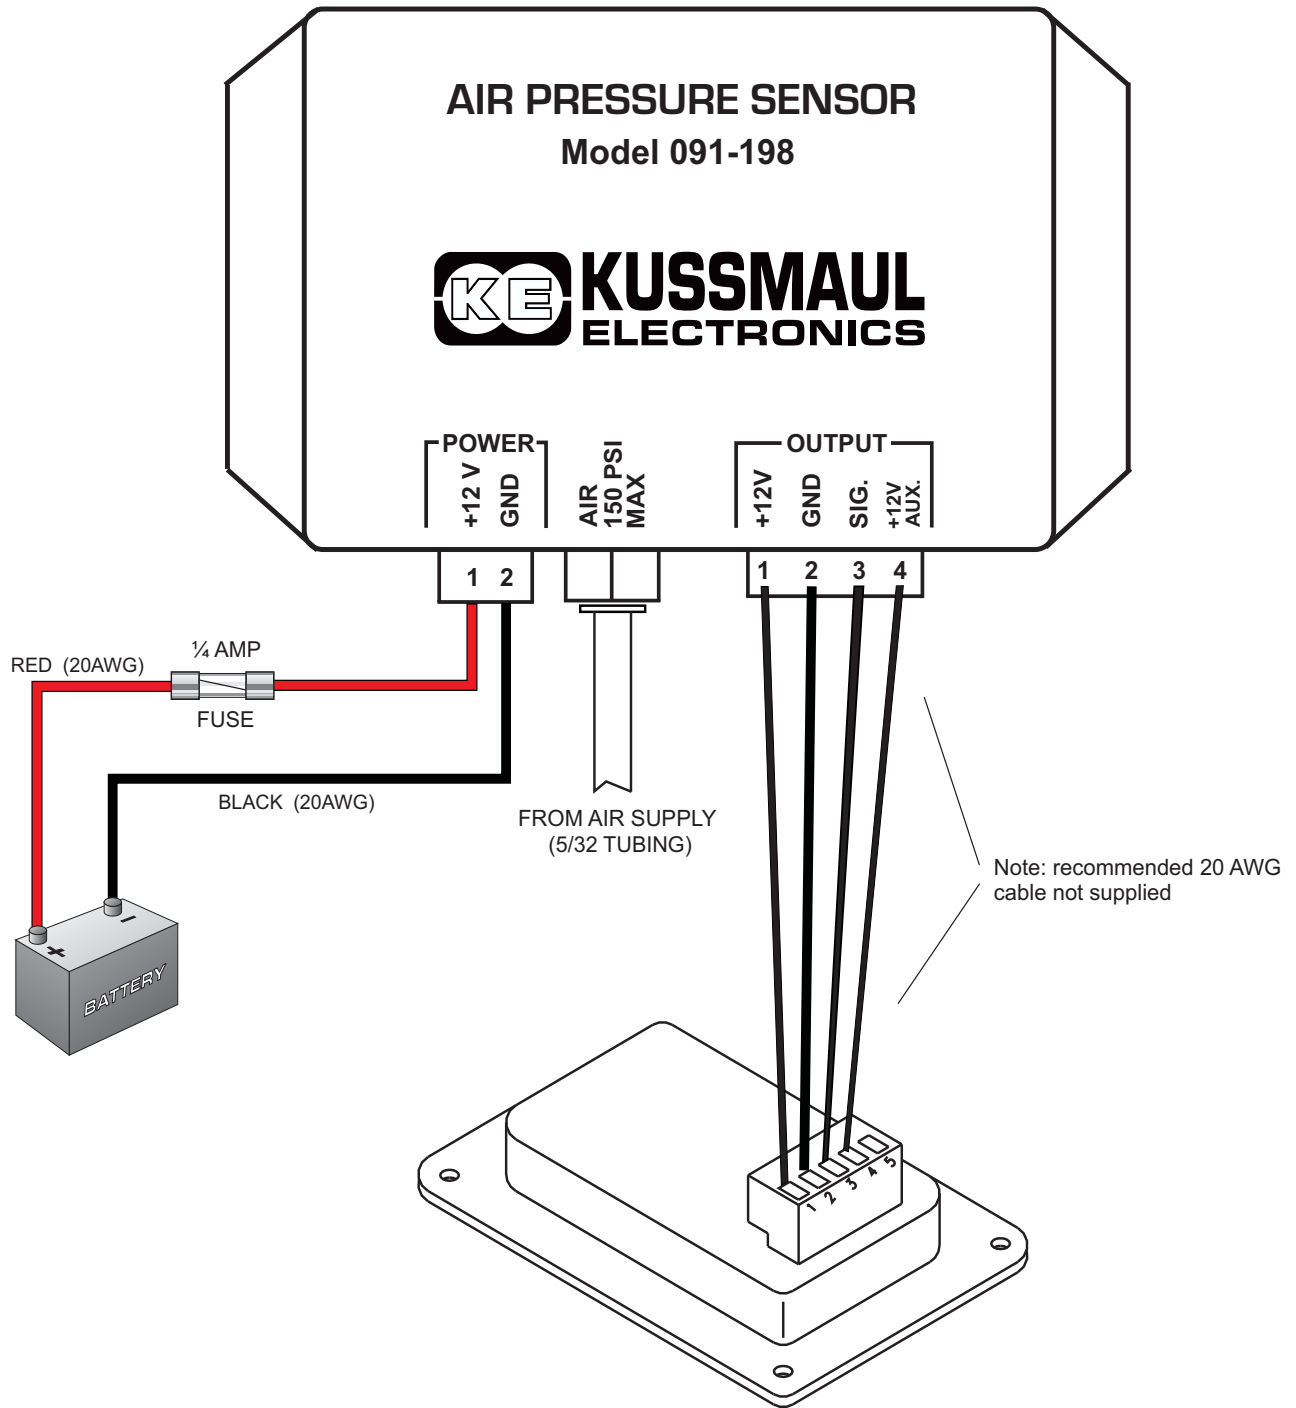

091-198-12-PP: Wiring Instructions

# SPECIFICATIONS

---

**Input Voltage:** 7-16 VDC (12 VDC nominal)

**Input Current:** 100 mA, maximum

**Input Fuse:** 250 mA (1/4 Amp)

**Air Supply:** 150 PSI, max

**LED Voltage Set Points:**

**High Voltage:** 14.82 VDC and above

**Charged:** 13.08 to 14.82 VDC

**Charging:** 12.84 to 13.08 VDC

**No LEDs On:** 12.30 to 12.84 VDC



**Low Voltage:** 12.30 VDC and below

**Hardware Pack Provided:** (1) PLBPC4-01: Fitting, Straight, 1/8 NPT X 5/32  
(36") WIR1B-201-10: Nylon, M 5/32" O.D. Tubing

**Weight:** .5 pounds

# OUTLINE DRAWING

---

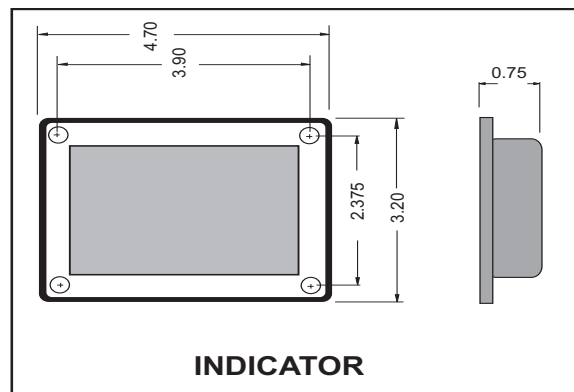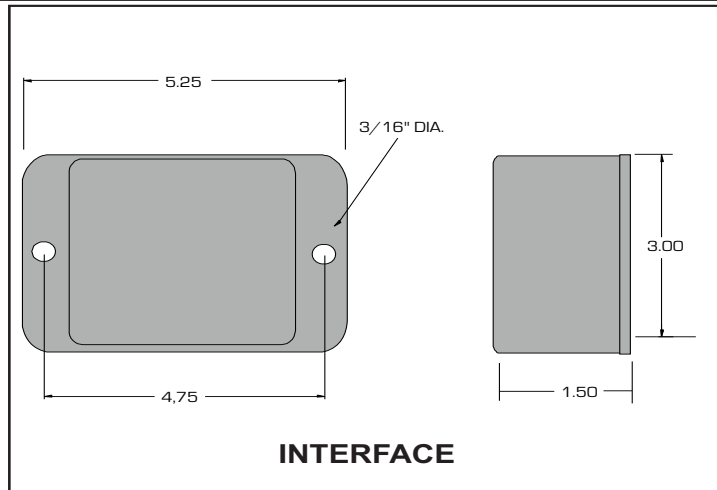

---

170 Cherry Avenue  
West Sayville, NY 11796  
www.kussmaul.com



Ph: 800-346-0857  
Fax: 631-567-5826  
sales@kussmaul.com

## OPTIONAL ACCESSORIES

---

### I. INDICATOR SEAL, MODEL #: 091-39-109

- Provides a waterproof seal for the status center display



# INSTALLATION RECORD

---

DATE INSTALLED \_\_\_\_\_

INSTALLED BY \_\_\_\_\_

VEHICLE IDENTIFICATION \_\_\_\_\_

VEHICLE OWNER \_\_\_\_\_

# WARRANTY POLICY

---

All products of Kussmaul Electronics are warranted to be free of defects of material or workmanship. Liability is limited to repairing or replacing at our factory, without charge, any material or defects which become apparent in normal use within 3 years from the date the equipment was shipped. Defective products should be returned to Kussmaul Electronics with shipping charges prepaid. Upon repair, products will be returned to customer with shipping charges paid.

Kussmaul Electronics shall have no liability for damages of any kind to associated equipment arising from the installation and/or use of the Kussmaul Electronics products. The purchaser, by the acceptance of the equipment, assumes all liability for any damages which may result from its installation, use or misuse, by the purchaser, his or its employees or others.



Members of  
Fire and Emergency  
Manufacturers and  
Service Association



Members of  
National Fire  
Protection  
Association



Members of  
Fire Apparatus  
Manufacturers  
Association



---

170 Cherry Avenue  
West Sayville, NY 11796  
[www.kussmaul.com](http://www.kussmaul.com)



Ph: 800-346-0857  
Fax: 631-567-5826  
[sales@kussmaul.com](mailto:sales@kussmaul.com)